



ActivFlo

Water Conditioner

Installation Instructions



In this procedure document we have endeavoured to make the information as accurate as possible.

We cannot accept any responsibility should it be found that in any respect the information is inaccurate or incomplete or becomes so as a result of further developments or otherwise.

Intatec Ltd

Airfield Industrial Estate

Hixon

Staffordshire

ST18 0PF

Tel: **01889 272 180**

Fax: **01889 272 181**

email: **sales@intatec.co.uk**


web: **www.intatec.co.uk**

Introduction

The ActivFlo BSP range of water conditioners have been designed and engineered for whole house protection. Simply match the operating flow rate of the ActivFlo to that of the incoming flow rate to your property.

For maximum protection we recommend to install your ActivFlo onto the incoming mains supply prior to any draw off points, this helps guarantee optimum performance for all your system components..

Dimensions

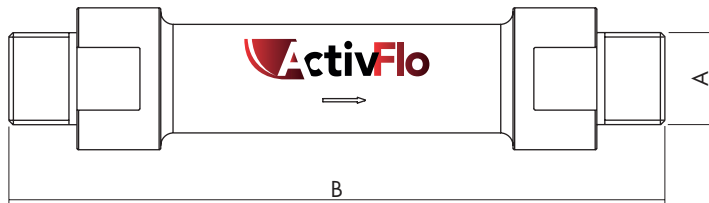

Model No.	A	B
AF012	½"	147
AF034M	¾"	195
AF010	1"	305

Installation

To ensure optimum performance of the ActivFlo it is recommended that sizing and selection are completed using the selection chart, see page 2 of this leaflet.

Once sized correctly, the ActivFlo should be installed on the incoming water main supplying the property, immediately after the stop-cock and before any draw off points or heating equipment. The ActivFlo can be installed into new or existing pipe systems using the male thread connections and following the procedure below;

- Before commencing turn off the water supply and have a container to collect any excess water draining from the pipework.



Installation

- Cut out a suitable length of tube from the pipework.



- Ensure that the ActivFlo is installed with the flow direction arrow pointing in the same direction as the water flow.
- Using two female connectors (not supplied) install the ActivFlo into the pipe and make water tight joints.
- Other fittings may be used to connect to different types of pipe.
- Turn on the water supply and check to ensure water tight joints.

ActivFlo


Maximum operating Temperature: 99°C

Insulation will be required below 0°C

Maximum pressure: 16 bar

Minimum pressure: 0.1 bar

Operational Flow Rates

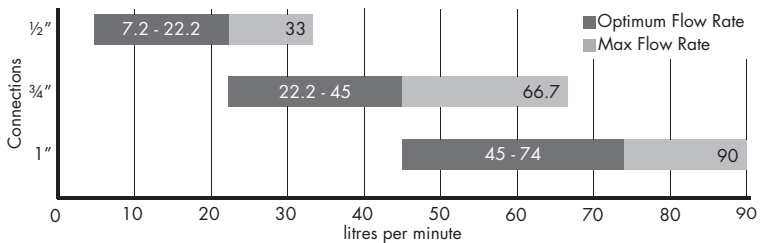



Please leave this Manual for the User

To activate your product warranty please visit

www.intatec.co.uk

and click on Product Registration

Intatec Ltd

Airfield Industrial Estate

Hixon

Staffordshire

ST18 0PF

Tel: **01889 272 180**

Fax: **01889 272 181**

email: **sales@intatec.co.uk**

web: **www.intatec.co.uk**

E & O.E